

Installation Procedure - Cases with short latch pin (Nanuk 908, 950, 960)

Cases with 4 latches - TSA latches should always be installed together on either side of the carrying main handle.

Step 1 | Remove Powerclaw latch

- 1 Open and secure latch in lower locked position.
- 2 Use hammer and punch to slide latch pin towards the outside of the case.
Push on the opposite side of the splines of the pin.
- 3 Remove pin, use pliers if necessary. Remove latch.



Step 2 | Install TSA Powerclaw latch

- 1 Loosely install latch in lower locked position.
Do not hook upper latch to case before pin installation.
- 2 Insert smooth end of new pin into case.
Be careful to align pin with holes in TSA latch.
- 3 Push pin as far as possible by hand.
- 4 Use a hammer and punch to carefully install pin flush with case surface.



Step 3 | Verify latch function

- 1 Open and close latch several times to ensure proper operation.
- 2 Use key to verify locking/unlocking function.



Installation Procedure - Cases with long latch pin (Nanuk 918, 920, 925, 933, 935, 940, 945)

Cases with 4 latches – TSA latches should always be installed together on either side of the carrying main handle.

Step 1 | Remove Powerclaw latch

- 1 Open and secure latch in lower locked position.
- 2 Use a wire cutter or pliers to remove pin by forcing pin outwards.
- 3 Remove pin, use pliers if necessary. Remove latch.



Step 2 | Install TSA Powerclaw latch

- 1 Loosely install latch in lower locked position.
Do not hook upper latch to case before pin installation.
- 2 Insert smooth end of new pin into case.
Be careful to align pin with holes in TSA latch.
- 3 Push pin as far as possible by hand.
- 4 Use a hammer and punch to carefully install pin flush with case surface.



Step 3 | Verify latch function

- 1 Open and close latch several times to ensure proper operation.
- 2 Use key to verify locking/unlocking function.

