

## SKB 3i series standard latch change out to TSA locking latch instructions

This kit includes two latches and 4 latch pins. You will use the spare latch pins to drive out the pin that is in your case, and you can replace the pins in your case if they are damaged. Follow these instructions to replace your latches:

1. Align extra latch pin from kit with the pin installed on the case from the center of the case and tap the pin out using a hammer until you have enough exposed to grip the pin with a pair of pliers.
2. Slide the latch pin out using the pliers until it clears the latch if your case is the two rib design, or all the way out if it is the single rib design.
3. Actuate the trigger to remove the old latch and then place the new locking latch on the case and slide all the way up to align the pin holes.
4. If you removed the latch pin completely make sure that you reinstall the pin with the smooth end going in first. One end of the pin has raised grooves on it to lock it into the case. Lightly tap the pin back into place until it is flush with the side of the rib. Actuate the latch to make sure it operates smoothly and your installation is complete.

To see a video presentation of the latch change out visit our You Tube channel at:

<http://www.youtube.com/user/skbcases>



Align spare pin and tap out with hammer



Pin is out far enough to grip with pliers



Grip pin with pliers and slide out



Once pin is clear of latch, actuate to remove latch



Insert new latch and align pin by sliding at latch as far up as possible



Tap pin back in place to secure latch. Actuate latch to make sure it operates smoothly